

BUT0695

Also suitable for RAM Promaster  
and Freightliner

**Ford Transit Fuel Pickup Instructions**

**Suitable For the Following Vehicles**

Ford Transit 2006 Onwards

Mercedes Sprinter 2018 Onwards

Mercedes Vito 2016 Onwards

**Suitable For the Following Heater Kits**

Airtronic D2 D4 D4S D5 D4+

Air Top 2000 S ST STC & EVO 40 & 55

Autoterm / Planar

Chinese Heaters

Contents	
Description	Quantity
Blue Fuel Line Metre	2
7.5 x 4.5 Reducing Elbow	1
6 x 4 Fuel Hose Reducer	1
9mm Fuel Hose Clip	3
11mm Fuel Hose Clip	1

**i** NOTE | The Fuel Tank MUST be lowered to access fuel port

Lower the fuel tank to access the auxiliary fuel port

(Figure 1) Transit Tank / (Figure 2) Transit sender / (Figure 3) Mercedes Sender

Cut the tip off the fuel port nipple to open the port enough to feed in the blue fuel line

Assemble the Kit as per Figure 4. Securing the line at smallest end A with clip provided to correct length of dip line at Transit 175mm / Mercedes 215mm cut end of dip pipe at 45 degrees

Once assembled feed the blue line through the fuel port and attach the elbow end B (largest end) over the fuel port and secure using provided clip

Feed the Remaining line to the fuel pump and secure using the remaining rubber hose and clip.



Figure 1 Auxiliary Fuel Port



Figure 2



Figure 3 Auxiliary Port

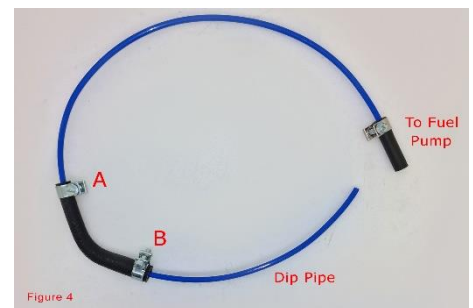


Figure 4 Dip Pipe

