

E7193T

## Ford Transit Fuel Pickup Instructions

### Suitable For the Following Vehicles

Ford Transit 2006 Onwards

### Suitable For the Following Heater Kits

Airtronic D2 D4 D4S D5 D4+

Air Top 2000 S ST STC & EVO 40 & 55

Autoterm / Planar

Chinese Heaters

| Contents                 |          |
|--------------------------|----------|
| Description              | Quantity |
| Blue Fuel Line Meter     | 2        |
| 7.5 x 4.5 Reducing Elbow | 1        |
| 6 x 4 Fuel Hose Reducer  | 1        |
| 9mm Fuel Hose Clip       | 3        |
| 11mm Fuel Hose Clip      | 1        |



**NOTE | The Fuel Tank MUST be lowered to access fuel port**

Lower the fuel tank to access the auxiliary fuel port

There is no need to remove the sender unit from tank.

(Figure 1) Tank Fuel port or (Figure 2) Transit sender Port depending on model and year.

Cut the tip off the fuel port nipple to open the port enough to feed in the blue fuel line

Assemble the Kit as per Figure 4. Securing the line at smallest end A with clip provided to correct length of dip line a 175mm and cut end of dip pipe at 45 degrees

Once assembled feed the blue line through the fuel port and attach the elbow end B (largest end) over the fuel port and secure using provided clip

Feed the Remaining line to the fuel pump and secure using the remaining rubber hose and clip.



**Heating the Blue fuel line after the large end of the elbow will remove any curve in the tube and ensure the dip tube does not curl up**



Figure 1 Auxiliary Fuel Port



Figure 2

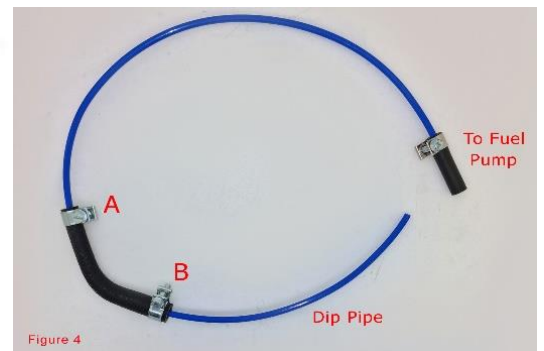


Figure 4